



The Candle Maker Instruction Manual



Thank you for purchasing The Candle Maker by Chandler & Me. With this unit you'll be making candles like a pro Chandler in no time. Please read this manual carefully to ensure safe and proper use and years of candle making fun and enjoyment.

Instructions for using your Candle Maker

Place the unit on a flat, even surface such as a kitchen counter and plug in the unit. To turn the unit on, simply place the pitcher onto the heating element. At start-up all lights will flash briefly, and a short beep will be heard. The first icon will start flashing and the machine is now ready for use.




1. Pour a pre-measured amount of soy wax into the pitcher and press this button to start the melting process. As the wax melts, gradually add any remaining unmelted wax until all your wax is in the pitcher.



2. When this light is flashing, pour your pre-measured fragrance into the pitcher and press this button to start the stirring process.

Preparing your candle jar (please note that the candle jar, wick, and accessories are sold separately): Stick your wick firmly to the base of the jar. We recommend using a wick sticker for this task, being careful to ensure it is centered in the middle of the jar. Use a wick bar or similar item to help support your wick in the center, as per the diagram.

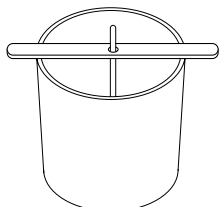


3. When the pour indicator lights up, it is time to lift the pitcher and pour the wax carefully into your prepared candle jar.

For the best results let your candle cool slowly in an area with a relatively stable temperature.

Tip: If you have a marble or stone countertop, place the candle on a cutting board to prevent too much heat being drawn from the bottom of your container.

Once the wax has been poured, try not to disturb the jar while the wax is setting.

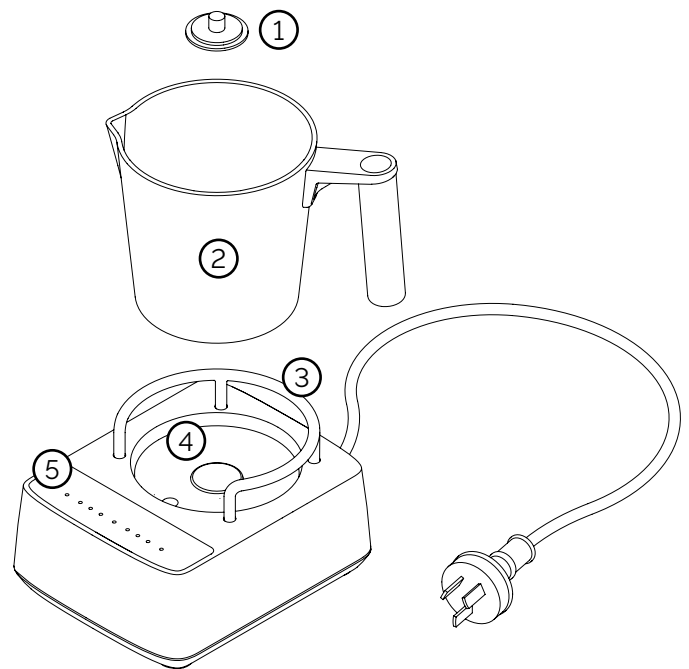

Components

- | | |
|-----------------------|--------------------|
| 1. Stirrer attachment | 4. Heating Element |
| 2. Pitcher | 5. Control Panel |
| 3. Cradle | |

The Candle Maker Instruction Manual

Safety

- Please read these instructions carefully and save for further reference.
- This appliance is intended to be used in a household environment.
- When you first unpack The Candle Maker appliance, please check for any damages or defects and contact the supplier immediately if any issues are found.
- Please check that all items are included and dispose of the packaging carefully. Keep plastic bags and small items away from children and pets.
- The Candle Maker is designed for making soy candles using suitable ingredients such as soy waxes and candle fragrances available from our resellers; any unintended use, including using other ingredients, may damage the unit and will void your warranty.
- The manufacturer is not responsible for any defects, accidents or potential injury as a result of misuse of this appliance.
- If this unit malfunctions please disconnect the power immediately. Do not attempt to repair the unit yourself. Please notify the reseller immediately.
- The Candle Maker is recommended for ages 12 and up. Please supervise younger children.
- During use, do not touch the heating element or the body of the pitcher. Both of which can reach temperatures of over 180 degrees Fahrenheit.
- After use do not touch the heating element surface as it is subject to residual heat.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Avoid spillage on the power plug socket.

Cleaning

- When cleaning the appliance, unplug the unit. Wipe the unit with a damp cloth. Be careful as the heating element may still be hot.
- DO NOT immerse the main unit into water, doing so will damage the internal electrical

components and your warranty will be voided. Immersing the unit in water while plugged in to the power supply may cause a severe electric shock!

- There may be some slight soy wax residue in the pitcher. Before the wax has cooled, wipe the pitcher out with a paper towel and Isopropyl alcohol to remove any residue. Alternatively, you may clean the pitcher using warm soapy water, be sure to remove and wash the stirrer attachment regularly.

Trouble Shooting

- If the jug is accidentally lifted from the heating element part way through the process simply place it back on the element. The unit will reset back to stage one, press the flashing icon again.
- If you walk away and attend to other tasks around the home while making a candle don't worry, the unit will wait for you at whatever stage it is up to. The unit will turn off after two hours if a button has not been pressed or the pitcher lifted.

Model: CM4718UO

Voltage: AC110V 50/60Hz

Power: 780W

Heater: Plate heating

Volume: Dry wax flakes 7 oz (1.5 cups)

Liquid wax 16 fluid oz

Unit Dimensions: 6.3 in mm L x 5.11 in W x 3.3 in H (without pitcher)

Warranty

This unit carries a 12-month warranty against manufacturing defects. Should this unit malfunction please contact your reseller immediately. The unit is designed for use with approved ingredients supplied by our authorized resellers. Using other ingredients in your Candle Maker, or using the unit for any purpose other than authorized by Chandler & Me and our resellers will void your warranty.