

Chandler & Me

The Candle Maker Instruction Manual

Thank you for purchasing The Candle Maker by Chandler & Me. With this unit you'll be making candles like a pro Chandler in no time. Please read this manual carefully to ensure safe and proper use and years of candle making fun and enjoyment.

Instructions for using your Candle Maker with the 16oz pitcher (supplied)

Place the unit on a flat, even surface such as a kitchen counter and plug in the unit. To turn the unit on, simply place the pitcher onto the heating element. At start-up all lights will flash briefly, and a short beep will be heard. Buttons 1, 2, 3 will start flashing and the machine is now ready for use.



1. Pour a pre-measured amount of soy wax into the pitcher and press button 1 to start the melting procedure




2. When button 2 is flashing pour your pre-measured fragrance into the pitcher and press this button to start the stirring procedure



3. When button 3 lights up it is time to lift the pitcher and pour the wax carefully into your candle jar

Before you pour: Stick the wick firmly to the base of the jar, being careful to ensure it is centered in the middle of the jar. Use the wooden wick holder to help support your wick in the centre, as per the diagram.

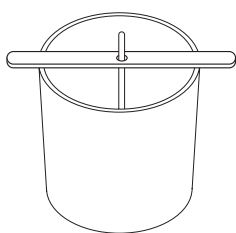


Pouring: Pour the melted wax slowly but surely into the jar, being careful to avoid the wooden wick holder.

For the best results let your candle cool slowly in an area of the house with a relatively stable temperature.

Tip: If you have a marble or stone benchtop, place the candle on a bread board to prevent too much heat being drawn into the bench.

Once the wax has been poured try not to disturb the jar while the wax is setting.

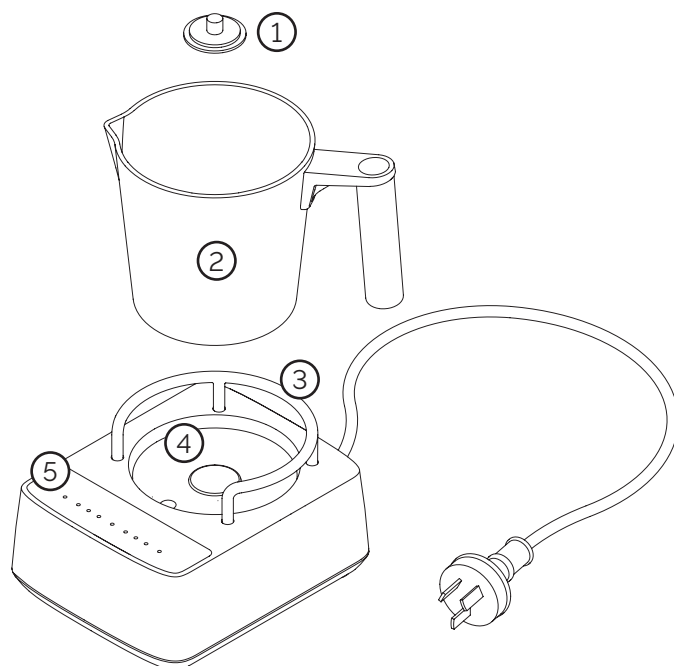

Components

- | | |
|-----------------------|--------------------|
| 1. Stirrer attachment | 4. Heating Element |
| 2. Pitcher | 5. Control Panel |
| 3. Cradle | |

Changing the mode. Your Candle Maker has three handy modes that provide flexibility for making bigger batches using the large pitcher (sold separately) and for melting beeswax at a higher heat.



Normal Operation



- Press button 1 to start normal operation.
Best for: making 1 to 2 medium size soy candles at a time using the standard pitcher.

Large Batch Mode. This mode should be selected when you are using the large 34oz pitcher (sold separately).



- Press button 2 to start large batch mode.
Best for: making 4 - 5 medium size soy candles at a time using the large pitcher.
Tip! Always feed the wax flakes in as it melts to avoid overloading the stirrer.

High Heat Mode



- Press button 3 to start high heat mode which will melt your wax to around 179F. You can then remove the melted wax or continue the stirring phase.

Best for: melting of beeswax to 179F. Can be used with both the standard and large pitchers.

The Candle Maker Instruction Manual

Safety

- Please read these instructions carefully and save for further reference.
- This appliance is intended to be used in a household environment.
- When you first unpack The Candle Maker appliance, please check for any damages or defects and contact the supplier immediately if any issues are found.
- Please check that all items are included and dispose of the packaging carefully. Keep plastic bags and small items away from children and pets.
- The Candle Maker should only be used for the melting and mixing of ingredients supplied by Chandler & Me and/or our authorised distributors; any unintended use, including using other ingredients, may damage the unit and will void your warranty.
- The Candle Maker is designed for making soy candles using pre-tested and pre-measured ingredients packs available at www.chandlerandme.com and authorised waxes and fragrances available through our distributors.
- The manufacturer is not responsible for any defects, accidents or potential injury as a result of misuse of this appliance.
- If this unit malfunctions please disconnect the power immediately. Do not attempt to repair the unit yourself. Please notify the distributor immediately.
- The Candle Maker is recommended for ages 10 and up. Please supervise younger children and anyone who may have reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- During use, do not touch the heating element or the body of the pitcher. Both of which can reach temperatures of over 185 degrees Fahrenheit.
- After use do not touch the heating element surface as it is subject to residual heat.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Avoid spillage on the power plug socket.

Cleaning

- When cleaning the appliance, unplug the unit from the mains power supply. Wipe the unit with a damp cloth. Be careful as the heating element may still be hot.
- DO NOT immerse the main unit into water, doing so will damage the internal electrical components and your warranty will be voided. Immersing the unit in water while plugged in to the mains may cause a severe electric shock!
- Clean the pitcher using hot soapy water.
- There may be some slight soy wax residue in the pitcher, washing in hot soapy water will dissipate the wax and the water can be flushed down the sink. The soy wax is plant based and eco-friendly.

Trouble Shooting

- If the pitcher is accidentally lifted from the heating element part way through the process simply place it back on the element. The unit will reset back to stage one, press the flashing icon again.
- If you walk away and attend to other tasks around the home while making a candle don't worry, the unit will wait for you at whatever stage it is up to. The unit will turn off after two hours if a button has not been pressed or the pitcher lifted.

Model: CM4718LJM

Voltage: AC110V 50/60Hz

Power: 680W

Heater: Plate heating

Volume: 150-500 ml

Cord length: 1.05 metres

Unit Dimensions: 160mm L x 130mm W x 160mm D

Warranty

This unit carries a 12-month warranty against manufacturing defects. Should this unit malfunction please contact your distributor immediately. The unit is designed for use with approved ingredients supplied exclusively by Chandler & Me and our authorized distributors. You can purchase ingredients from the Chandler & Me website or your local distributor. Using other ingredients in your Candle Maker, or using the unit for any purpose other than authorized by Chandler & Me will void your warranty.